

# SWEDX



**User's Guide**  
**XV1-40TV V3**  
**XV1-46TV V3**

European Version V3

**SWEDX**



## INDEX

|                                           |    |
|-------------------------------------------|----|
| Introduction                              | 4  |
| Basic operation                           | 5  |
| Contents                                  | 6  |
| Control buttons                           | 7  |
| Connections on the rear of the LCD-TV     | 7  |
| Remote control buttons                    | 8  |
| Basic Operation                           | 9  |
| Volume Control                            | 9  |
| OSD Menu Structure                        | 9  |
| OSD Menu Operation                        | 10 |
| TV Mode ► Picture Menu                    | 10 |
| TV Mode ► Sound Menu                      | 10 |
| ITV Mode ► Advance Menu                   | 11 |
| TV Mode ► OSD Menu                        | 11 |
| TV Mode ► TV-channel Menu                 | 11 |
| TV Mode ► TV-channel Menu ► Auto Scan     | 12 |
| TV Mode ► TV-channel Menu ► Manual Search | 12 |
| TV Mode ► TV-channel Menu ► Channel Edit  | 12 |
| TV Mode ► PIP Menu                        | 13 |
| PC Mode ► Picture Menu                    | 14 |
| PC Mode ► Geometry Menu                   | 14 |
| Scart Mode ► Picture Menu                 | 14 |
| Scart Mode ► Sound Menu                   | 15 |
| Scart Mode ► Advance Menu                 | 15 |
| Scart Mode ► OSD Menu                     | 15 |
| Scart Mode ► PIP Menu                     | 15 |
| YPBPR Mode ► Picture Menu                 | 16 |
| YPBPR Mode ► Sound Menu                   | 16 |
| YPBPR Mode ► Advance Menu                 | 16 |
| YPBPR Mode ► OSD Menu                     | 16 |
| YPBPR Mode ► PIP Menu                     | 16 |
| Wall mode                                 | 17 |
| Desk mode                                 | 17 |
| Troubleshooting                           | 18 |
| Warranty and Service                      | 19 |
| Accessories                               | 21 |

**Introduction**

Thank you for buying SWEDX LCD-TV. Please read this manual thoroughly before operating the TV. Make sure the display was not damaged in transit. Should the TV be damaged, please contact your dealer and do not install it. Check that you have all the accessories according to the model.

**Safety precaution**

- Do not place the TV on unstable places, from which it may fall off.
- Do not expose the TV to extreme temperature and humid environment.
- Avoid subjecting the TV to direct sunlight and other heat sources.
- Do not put the TV into any liquid.
- Do not put anything inside the TV, or place water container on top of the TV.
- In thunder rainy days (especially with lightening), please plug out the power plug and antenna plug.
- Do not step on the power cable, or tangle them together
- Avoid overload of the exterior electric outlet to prevent fire hazard of electric shock.
- Clean the TV with dry and soft cloth (without evaporative matter).
- If your TV is broken, do not repair it by yourself, but contact the maintenance personnel.
- If the remote control is left unused for a long time, please take the batteries out and store them in dry places.
- Avoid dropping the remote control.
- If the LCD TV is installed for exhibition purpose, please do not place the overheated part on the ground or carpet to prevent accident.

Please install the TV at proper position, such as wall or ceiling. Please install it under the guidance of professional staff. (When used or exhibit, please do not place the TV horizontally or vertically on the ground.)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should avoid from water drops and things that fill with liquid, such as vases, cannot be placed on this equipment.

This equipment is predetermined to work constantly (unless adding switch on this equipment) Please disconnect the power cord if this equipment will not be used for a long time.

**Precautions When Displaying a Still Image**

A still image may cause permanent damage to the TV screen.

- Do not display a still image on the LCD panel for more than 2 hours as it can cause screen image retention.  
This image retention is also known as "screen burn".  
To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.
- Watching the LCD TV in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and center of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause a similar effect to the screen. Damages caused by the above effect are not covered by the Warranty.
- Displaying still images from Video games and PC for longer than a certain period of time may produce partial after-images.  
To prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images.

### **Basic operation**

- Use AC 100--240V 50-60 Hz power outlet for the TV power supply.
- If the screen of TV is not on, please press the power button on the remote control or on the TV.
- If you want to shut off the TV temporary, please press the power button on the remote control or on the TV.
- If you want to shut off the TV completely, please switch off the power ON/OFF.
- In TV/AV state, the TV will enter idle state if there is no signal input within 15 minutes.
- In PC state, the TV will enter idle state if there is no signal input within 40 seconds.
- The setting and tuning of picture and sound will be saved when the TV is shut off, which will be working in the pre-shut off state when the TV is turn on again.
- If PC signal source is used, please first set the resolution of the PC display card as the following modes: (1024\*768 60 Hz, 800\*600 60 Hz, 640\*480 60 Hz)
- If there is line-by-line output of the signal used by the user, signal source with line-by-line output is recommended.

### **Preparation**

- Put the TV on a stable surface.
- Do not fix the TV with others fixations than those provided or suggested by the manufacturer.
- If you have a wall mount, check that it is steady.
- Do not place any material on the TV.
- Do not block or cover the ventilation openings on the TV.
- The TV must be plugged with a tension source of 110-240 volts and 50 Hz.
- Power cord and cables must be properly routed and protected to prevent people from stepping on them and causing the TV to fall.
- Keep the power cord away from any heat source. Possible fire hazard.

### **Heating sources and humidity**


- Keep the TV dry and away from humidity.
- Keep the TV away from heat sources.

### **Cleaning and maintenance**

- Unplug the TV before cleaning it. Do not use solvents or liquids to clean the TV.
- Only clean the TV with a soft and dry cloth.
- In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits fire or others incidents. Please contact a technical authorized by SWEDX brand.

### **Departure in holidays**

- Unplug the LCD-TV during lightning storms or when unused for long periods of time.

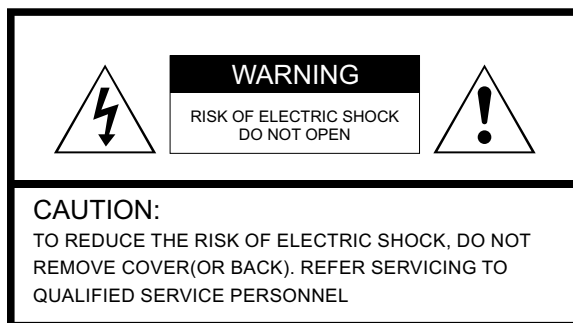



### **WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.


**Contents**

XV1-40TV / XV1-46TV Included items:
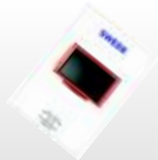
|                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |  |  |  |  |
| 2 x AAA Battery                                                                   | User's Guide                                                                      | AC Cable                                                                          | Aerial Cable                                                                      | LCD-TV                                                                            |

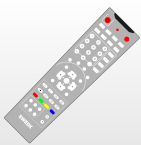
|                                                                                   |
|-----------------------------------------------------------------------------------|
|  |
| Remote Control                                                                    |

XV1-40TV / XV1-46TV Wall-Mount Accessories. Not included:

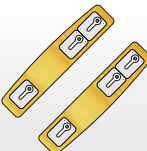
|                                                                                   |                                                                                   |                                                                                   |                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |  |  |  |
| Parts A. Wall-mounting, 2pcs.                                                     | Plug                                                                              | Screw B                                                                           | Screw A                                                                           |

### Control buttons:

The control buttons's outlook on your SWEDX LCD-TV is on of the following:

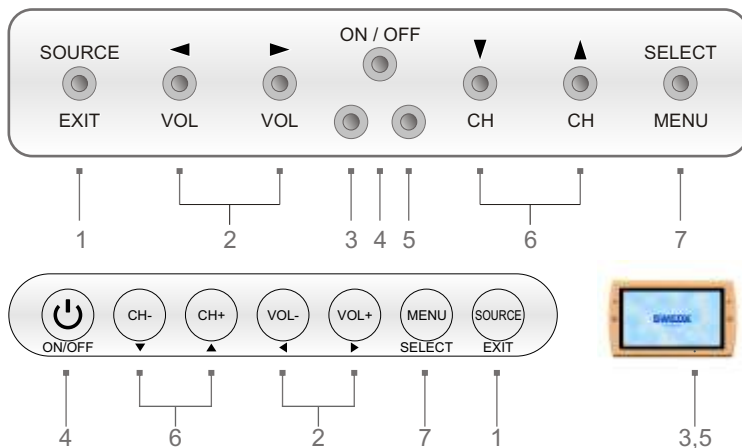

1. Source/Exit: Choose the input source / Exit the OSD menu
2. Vol: Decrease and increase the audio volume / Navigate the OSD menu
3. LED: Power indicator
4. ON/OFF: Power switch
5. IR: Remote control Infra Red receiver
6. CH: Zap the channels / Navigate the OSD menu
7. Select/Menu: Select in the OSD menu / Activate the OSD menu

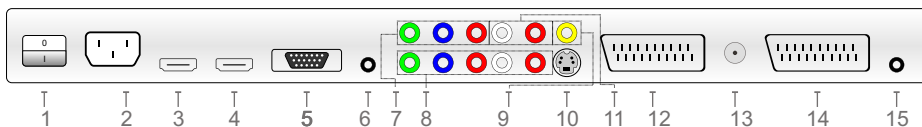


### Connections on the rear of the LCD-TV

1. Power switch: Switch to turn the LCD-TV On/Off
2. Power connector: AC power input terminal 110-240 Volt
3. HDMI 1 connection: High-definition multimedia interface  
Note: Acceptable video signal 480i/p, 576i/p, 720p, 1080i/p
4. HDMI 2 connection: High-definition multimedia interface  
Note: Acceptable video signal 480i/p, 576i/p, 720p, 1080i/p
5. PC/VGA connection: PC input terminal
6. PC/VGA Audio-in: Audio-input terminal of PC/VGA
7. Component (YPbPr) 2: Component (YPbPr) input terminal  
Note: Acceptable video signal 480i/p, 576i/p, 720p, 1080i/p
8. Component (YPbPr) 1: Component (YPbPr) input terminal  
Note: Acceptable video signal 480i/p, 576i/p, 720p, 1080i/p
9. AV: Composite video (AV) input terminal
10. S-video: S-video input terminal
11. Audio in: Shared Audio-input for Component (YPbPr) 2, Av1 & S-video
12. Scart 1: Scart input terminal. Full
13. ANT-in (analog): A signal must be received by from one of the following sources:  
An outdoor aerial / A cable television network / A satellite network
14. Scart 2: Scart input terminal. Half
15. Headphone: Input terminal for headphone

## Remote control buttons

1. On/Off button
2. Turn On/Off TV speakers
3. Enter sleep mode in certain chosen time
4. Select between Mono/Stereo audio if available
5. Picture size selection
6. Number buttons for direct channel access
7. One/Two-digit channel selection
8. Shortcut to HDMI1 input. Press Twice to access HDMI2
9. Shortcut to PC input
10. Menu display. In OSD sub-menu press to access previous menu
11. Navigation button *UP*
12. Confirm/activate button
13. Navigation/adjust button *LEFT*
14. Navigation button *DOWN*
15. Menu display for DVB
16. Activate Teletext
17. Alter Teletext mix
18. Teletext cancel
19. Teletext index
20. Fasttext topic selection in Teletext *RED*
21. Fasttext topic selection in Teletext *GREEN*
22. Item selection in DVB
23. Alter TV/Radio in DVB
24. Display time in DVB
25. Display EPG in DVB
26. Display favorite channels in DVB
27. Display subtitles in DVB
30. Use to see information about the current source
31. Picture freeze
32. Alter sound mode
33. Alter picture mode
34. Volume increase
35. Volume decrease
36. Next channel
37. Previous channel
38. Shortcut to DVB
39. Shortcut to TV
40. Exit the OSD
41. Navigation/adjust button *RIGHT*
42. Shortcut to Scart1 input. Press Twice to access Scart2
43. Hold Teletext
44. Teletext size selection
45. Reveal Teletext
46. Display time in Teletext
47. Fasttext topic selection in Teletext *Blue*
48. Fasttext topic selection in Teletext *Yellow*
49. Alter sound source in PIP/POP between main and sub sources.
50. PIP/POP/ On/Off
51. PIP position
52. PIP size

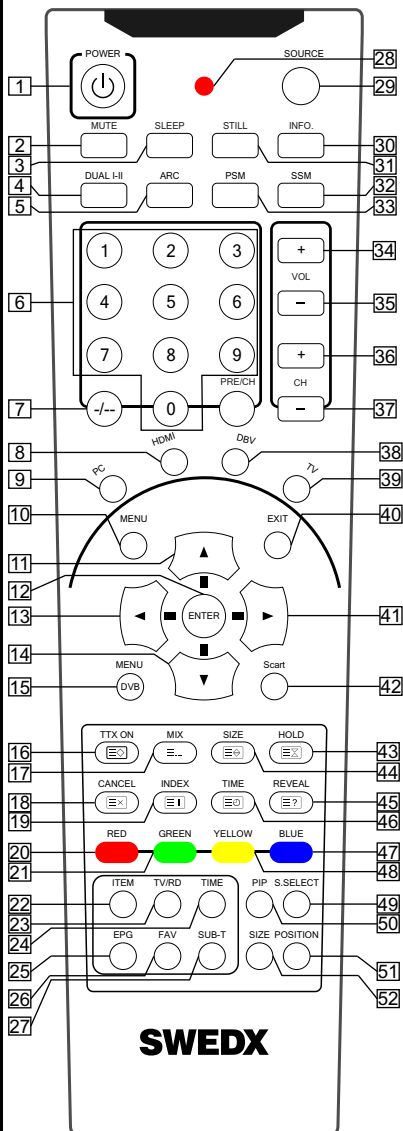

Buttons 15, 22, 23, 24, 25, 26, 27 and 38 are available if DVB-module is installed.


## Basic Operation

### Turning LCD-TV On/Off

Press Power button on the remote control or the On/Off button on the control buttons. The LCD will turn on and you will be ready to use its features.

### Select Source

Press Source button on the remote control. Then you can see the source list menu shown to the left. Press Navigation Up/down button on the remote control to select the source and confirm by pressing Enter.

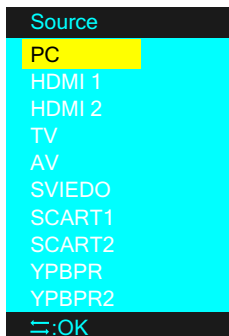

### Volume Control


Press VOL+ / VOL- button on the remote control to adjust the volume level.

Press MUTE button on the remote control when you need to mute the sound or change the volume level to 0.



### OSD Menu Structure

- OSD (On Screen Display) allows users to control or adjust various features and settings in accordance with his/her preferences.
- Press the MENU button on the remote control to see the main OSD menu.

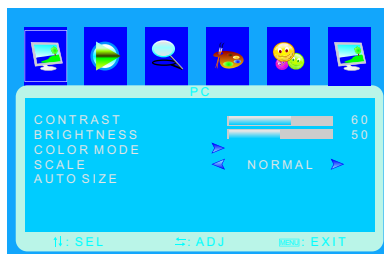

### Example of OSD Menu:

- Main Menu: Press the MENU button on the remote control to enter the main OSD menu. First, select Main menu item you need with the ◀ & ▶ buttons.  
To select a main menu items, just press Enter or Navigation buttons ▼ on the Remote Control.
- Sub-Menu: Each menu item has its own sub-menu items to set.
- Sub-Menu items:
  - A: If there is a ▶ part, the item has a sub-menu. You can enter the sub-menu and adjust an item you need.  
Select sub-menu item with ▲&▼ buttons on the remote control and press ◀ & ▶ buttons to enter the sub-menu or change the value.
  - B: If there is no ◀ part, the item has adjustable values. Use the ◀ & ▶ buttons to adjust the values.
  - C: If the sub-menu item is grey colored, it means this item is not available in the particular mode.

## **OSD Menu Operation:**

Press  button on the remote control to access the OSD Menu. Pressing the same button again will move you backwards in the OSD structure.

Press  button to confirm/select.

Use   buttons to navigate or change the parameters of the current sub-menu.

Use   buttons to navigate in the OSD Menu.

Press  button to exit the OSD Menu.

### **TV Mode ► Picture Menu**


In this Menu you can change the following parameters:

CONTRAST: 0 - 100.  
BRIGHTNESS: 0 - 100.  
SATURATION: 0 - 100.  
SHARPNESS: 0 - 100.  
COLOR TEMP.: NORMAL, WARM and COLD.  
SCALE: FULL, ZOOM1, SUBTITLE,  
REGULAR, PANORAMA and  
14:9.

PICTURE MODE: STANDARD, DYNAMIC, SOFT  
and PERSONAL.

NOISE REDUCE: OFF, LOW, MID and HIGH.

**Refer to page 10 for OSD Menu Operation.**

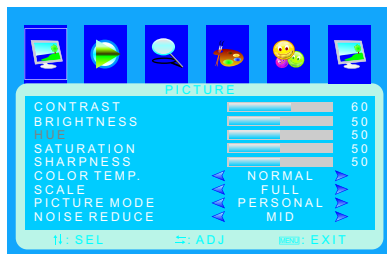

### **TV Mode ► Sound Menu**

In this Menu you can change the following parameters:

BASS: 0 - 100.  
TREBLE: 0 - 100.  
BALANCE: 0 - 100.  
SOUND MODE: STANDARD, NEWS, MUSIC and  
PERSONAL.

SUBWOOFER: ON - OFF.


AVC\*: ON - OFF.

LOUDNESS: Model1, 2, 3, 4 and OFF.

SUPER BASS: 1 - 12 and OFF.

SOUND EFFECT: *Not available.*

AUDIO MODE: MONO, STEREO AND II.

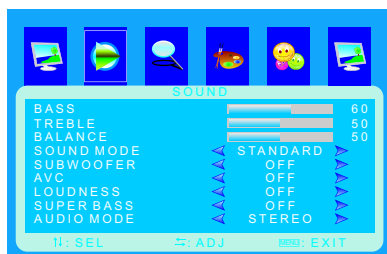


AVC: The source (cable or satellite box) may have a volume control that is set to a high level. Turn on the Automatic Volume Control (AVC) to control it.

**Refer to page 10 for OSD Menu Operation.**

### TV Mode ► Advance Menu

In this Menu you can change the following parameters:

CLOCKER\*: 00:00 - 23:59.  
ON TIMER\*: 00:00 - 23:59 and OFF.  
OFF TIMER\*: 00:00 - 23:59 and OFF.  
SLEEP TIMER: OFF, 15,30,45,60,90,120 minutes.  
TTX LANGUAGE: WEST, EAST, RUSSIAN, ARABIC  
and FARSI.  
AUTO FORMAT\*: ON - OFF.  
9 WIN\*: ON - OFF.

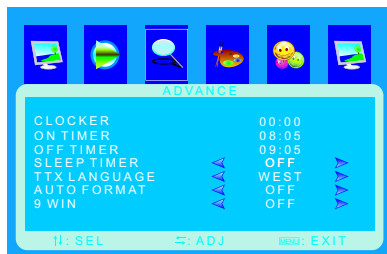

CLOCKER\*: Set the TV time.

ON TIMER\*: Turn ON the TV on given time.

OFF TIMER\*: Turn OFF the TV on given time.

AUTO FORMAT: Auto-switch to SCART or SCART2 when scart source signal is connected. *Only in TV, AV, SVIDEO, SCART AND SCART2 Mode.*

9 WIN\*: Activate 9 Win feature where you can watch 9 TV-channels at the same time. *Available only in TV mode.*

**Refer to page 10 for OSD Menu Operation.**



### TV Mode ► OSD Menu

In this Menu you can change the following parameters:

LANGUAGE\*: English, Chinese (Sim), Chinese (Td), Dutch, French, Spanish, Italian, Russian and Swedish.

OSD H-POSITION\*: 0 - 100.

OSD V-POSITION\*: 0 - 100.

OSD DURATION\*: 5, 15, 30 AND 60 sec.

OSD HALFTONE\*: 0 - 100.

INFORMATION\*:

MEMORY RECALL\*:

LANGUAGE: Change the OSD language.

OSD H-POSITION: Change the OSD position horizontally.

OSD V-POSITION: Change the OSD position vertically.

OSD DURATION: Change the duration time of the OSD.

OSD HALFTONE: Change the OSD background transparency.

INFORMATION: Display the current source information.

MEMORY RECALL: Reset all parameters to factory settings (not including tuned TV channels).

**Refer to page 10 for OSD Menu Operation.**



### TV Mode ► TV-channel Menu

In this Menu you can change the following parameters:

COLOR SYSTEM: PAL, SECAM and AUTO.


SOUND SYSTEM: B/G, I, D/K, L, L'.

AUTO SCAN: Search TV channels automatically.

MANUAL SEARCH: Search TV channel manually.

CHANNEL EDIT: See TV-channel ► Channel Edit.

PROGRAM AREA: Activate settings for certain country/system.

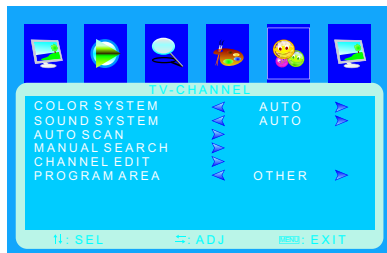


**Refer to page 10 for OSD Menu Operation.**

### **TV Mode ► TV-channel Menu ► Auto Scan**

In this Menu you can scan TV channels automatically. When activating the Auto Scan an information box will appear on the screen and display the scan progress.

In order to receive TV program, the signal should be received from outdoor antenna, cable TV or satellite broadcast network.

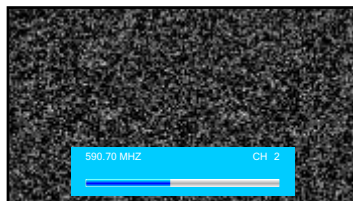

1. In these three cases, the input cable of antenna or TV network should be plugged in the 75 Ohm coaxial cable jack at the rear of LCD-TV.
2. If you are using indoor antenna and the effect of TV program is not satisfactory, you can adjust the position of the antenna until the picture is clear.

When installing LCD TV, please use special 75 Ohm coaxial Cable. If other coaxial cable is used, there may be noise and image disturbances.

**Refer to page 10 for OSD Menu Operation.**

### **TV Mode ► TV-channel Menu ► Manual Search**

In this Menu you can scan TV channels manually. When activating the Manual Scan an information box will appear on the screen. Choose the channel number you want to search manually and use the ◀ & ▶ buttons to start the search. When the desired channel is found navigate to STORE and press ◀ button to store the tuned channel in the chosen position.



### **TV Mode ► TV-channel Menu ► Channel Edit**

In this Menu you can sort the TV channels manually.

When activating the Channel Edit a sub menu will appear on the screen.

- |              |                                                     |
|--------------|-----------------------------------------------------|
| CHANNEL 1:   | Channel number.                                     |
| SKIP:        | ON - OFF.                                           |
| CHANNEL 2:   | Channel number.                                     |
| EXCHANGE:    | Execute exchange between channel 1 and 2 positions. |
| AFC:         | ON - OFF.                                           |
| FINE TUNING: | Perform fine tuning for selected channel.           |



## TV Mode ► PIP Menu

In this Menu you can activate the PIP function.

PIP: OFF, PIP and POP FULL.

SUB SOURCE: See description below.

SIZE: SMALL, MIDDLE or LARGE.

BORDER COLOR\*: BLUE and BLACK.

SOUND SOURCE\*: MAIN or SUB

SWAP: Perform swap between main and sub sources.


H-POSITION: 0 - 100. PIP window H-position.


V-POSITION: 0 - 100. PIP window V-position.

BORDER COLOR: BLACK or BLUE. Change the border color of the PIP/POP window.

SOUND SOURCE: Choose the source for the sound from main or sub sources.

**Refer to page 10 for OSD Menu Operation.**

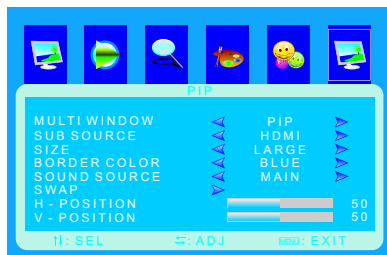

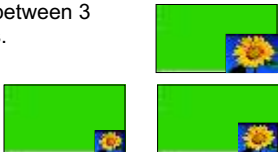
| Function            | Description                                                                                                        |                                                                                                                                                                                              |                                                         |
|---------------------|--------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| PIP                 |                                   | <b>Group 1</b><br>PC<br>HDMI<br>HDMI2<br>YPBPR<br>YPBPR2                                                                                                                                     | <b>Group 2</b><br>TV<br>AV<br>SVIDEO<br>SCART<br>SCART2 |
| POP                 |                                   | In PIP and POP, it is possible to choose a source from Group 1 as main source together with a source from Group 2 as a sub source or vice versa. Example, PC+TV, or SCART+HDMI.              |                                                         |
| PIP Size & Position | Choose between 3 PIP sizes.<br> | Choose between 4 predefined PIP positions or create customs positions with H and V-position feature.<br> |                                                         |

### PC Mode ► Picture Menu

In this Menu you can change the following parameters:

CONTRAST: 0 - 100.  
BRIGHTNESS: 0 - 100.  
COLOR MODE: NORMAL, WARM, COOL and RGB. In RGB mode you can change the level for RED, GREEN and BLUE colors.  
SCALE: NORMAL and CENTER.  
AUTO SIZE: Optimize the scaling of the signal.

**Refer to page 10 for OSD Menu Operation.**

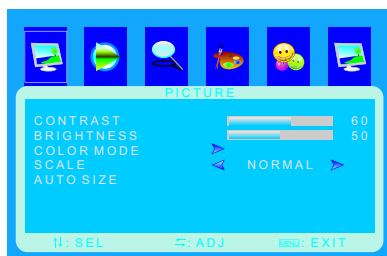


### PC Mode ► Geometry Menu

In this Menu you can change the following parameters:

H-POSITION: 0 - 100.  
V-POSITION: 0 - 100.  
CLOCK: 0 - 100.  
PHASE: 0 - 100.

**Refer to page 10 for OSD Menu Operation.**

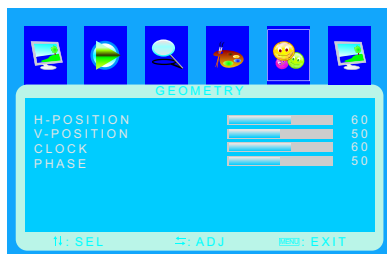


### Scart Mode ► Picture Menu

**Refer to page 10 TV Mode ► Picture Menu.**

This Menu applies also to the following sources:

AV  
SVIDEO  
SCART2

**Refer to page 10 for OSD Menu Operation.**

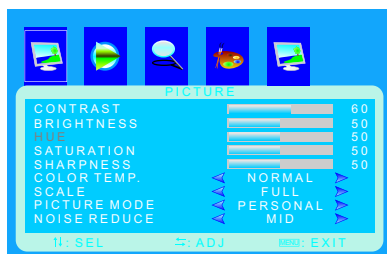

### **Scart Mode ► Sound Menu**

**Refer to page 10 TV Mode ► Sound Menu.**


This Menu applies also to the following sources:

AV

SVIDEO

SCART2

**Refer to page 10 for OSD Menu Operation.**

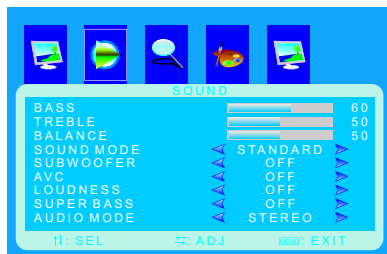

### **Scart Mode ► Advance Menu**

**Refer to page 11 TV Mode ► Advance Menu.**


This Menu applies also to the following sources:

AV

SVIDEO

SCART2

**Refer to page 10 for OSD Menu Operation.**

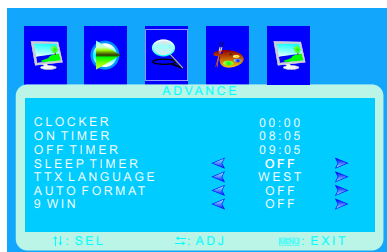

### **Scart Mode ► OSD Menu**

**Refer to page 11 TV Mode ► OSD Menu.**


This Menu applies also to the following sources:

AV

SVIDEO

SCART2

**Refer to page 10 for OSD Menu Operation.**

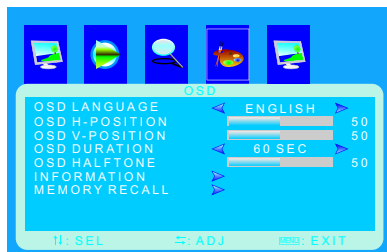

### **Scart Mode ► PIP Menu**

**Refer to page 13 TV Mode ► PIP Menu.**


This Menu applies also to the following sources:

AV

SVIDEO

SCART2

**Refer to page 10 for OSD Menu Operation.**

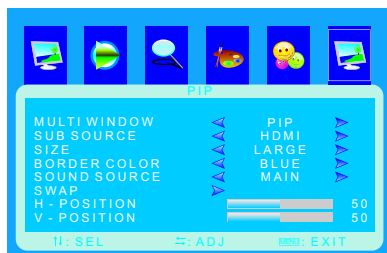

### **YPBPR Mode ► Picture Menu**

**Refer to page 10 TV Mode ► Picture Menu.**


This Menu applies also to the following sources:

YPBPR2

HDMI

HDMI2

**Refer to page 10 for OSD Menu Operation.**

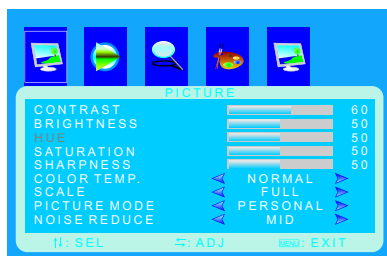

### **YPBPR Mode ► Sound Menu**

**Refer to page 10 TV Mode ► Sound Menu.**

This Menu applies also to the following


sources: YPBPR2

YPBPR2

HDMI

HDMI2

**Refer to page 10 for OSD Menu Operation.**

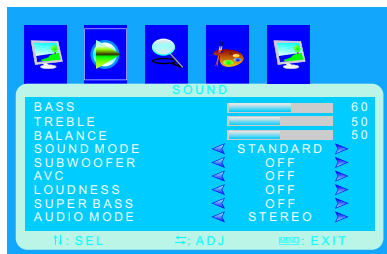

### **YPBPR Mode ► Advance Menu**

**Refer to page 11 TV Mode ► Advance Menu.**


This Menu applies also to the following sources:

YPBPR2

HDMI

HDMI2

**Refer to page 10 for OSD Menu Operation.**

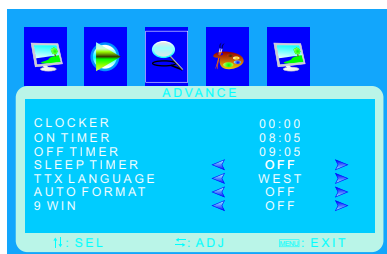

### **YPBPR Mode ► OSD Menu**

**Refer to page 11 TV Mode ► OSD Menu.**


This Menu applies also to the following sources:

YPBPR2

HDMI

HDMI2

**Refer to page 10 for OSD Menu Operation.**

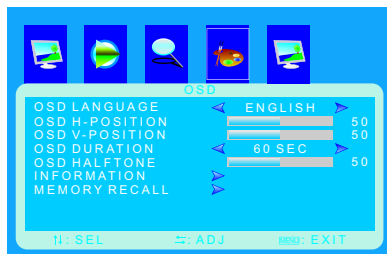

### **YPBPR Mode ► PIP Menu**

**Refer to page 13 TV Mode ► PIP Menu.**


This Menu applies also to the following sources:

YPBPR2

HDMI

HDMI2

**Refer to page 10 for OSD Menu Operation.**

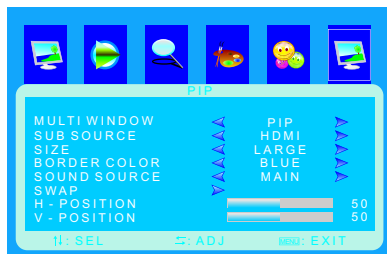

## Wall mode

1. Unmount the base by removing the screws at the base bottom. *See figure A.*
2. Drill the holes. The distance between the holes centers is given below according to the model. *See figure B*
3. Install the plug, part A and the screws according to the drawing to the right. *See figure C.*
4. Install the Parts A according to the figure B1. *Avoid to install the part up&down.*
5. Install the screws A on the rear of the LCD-TV. *See figure D.*
5. Hang the LCD-TV on the installed Parts A. The screws on the rear would fit in the Holes X on Parts A. After fitting the screws to the holes let the LCD-TV slide down to the limits on Parts A. *See figure E.*

**It is strongly recommended that you connect all connections cables before hanging the LCD-TV on the wall.**

Distance between holes:

**XV1-40:** **1121** mm horizontally.

**50** mm vertically between first and second hole from the top.

**100** mm vertically between second and third hole from the top.





**XV1-46:** **1143** mm horizontally.

**50** mm vertically between first and second hole from the top.

**100** mm vertically between second and third hole from the top.

## Desk mode

Install the base using the screws A and install your LCD-TV in desired position. *See figure A.*

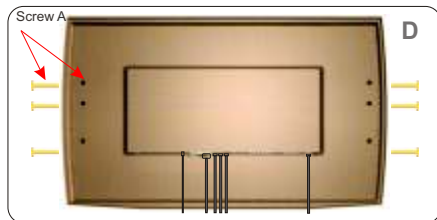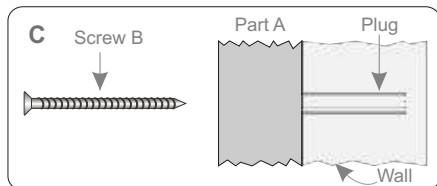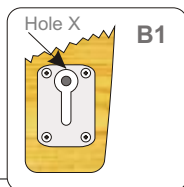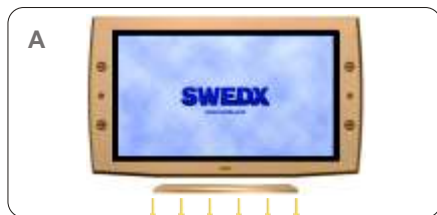

## **Troubleshooting**

Before contacting SWEDX service or your dealer, perform the following simple checks. If you cannot solve the problem using the instructions below, note the model and serial number of your set and contact your local dealer.

|                                                        |                                                                                                                                                                                                                                                           |
|--------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No sound or picture                                    | Check that the mains lead has been connected to a wall socket.<br>Check that you have pressed the POWER button on the front of the TV.<br>Check the picture contrast and brightness settings.<br>Check the volume.                                        |
| Normal picture but no sound                            | Check the volume.<br>Check whether the MUTE button has been pressed on the remote control.                                                                                                                                                                |
| No picture or black and white picture                  | Adjust the color settings.<br>Check that the broadcast system selected is correct.                                                                                                                                                                        |
| Sound and picture interference                         | Try to identify the electrical appliance that is affecting the set and move it further away.<br>Plug your set into a different mains socket.                                                                                                              |
| Blurred or snowy picture, distorted sound              | Check the direction, location and connections of your aerial.<br>This interference is often due to the use of an indoor aerial.                                                                                                                           |
| Remote control malfunctions                            | Replace the remote control batteries.<br>Clean the upper edge of the remote control (transmission window).<br>Check the battery terminals.<br>Turn off the TV and unplug the AC cable from the wall socket and then plug the AC cable and turn on the TV. |
| "No signal" message is displayed.                      | Check that the signal cable is firmly connected to the source input.<br>Check that the source are turned on.                                                                                                                                              |
| On PC mode, "Not Supported Mode" message is displayed. | Check the maximum resolution and the frequency of the video adapter..                                                                                                                                                                                     |
| The image is too light or too dark.                    | Adjust the Brightness and Contrast.                                                                                                                                                                                                                       |

## **Warranty and Service**

The following terms apply only to new "in the original carton" SWEDX products marketed and distributed by SWEDX, which are purchased and used by the original consumer purchaser. This information is subject to the terms and conditions of the written SWEDX warranty statement included with each product, and are available for examination from the dealer prior to purchase.

Depending on the model, your terms and conditions may be different from those shown below, and this information is subject to change without prior notice. Unless specifically stated otherwise, used and reconditioned products that are resold have no warranty from SWEDX and are considered sold "AS-IS", however, the selling dealer may offer additional service options.

### **Warranty for SWEDX products:**

Check with your dealer for the warranty period.

### **What the warranty covers:**

SWEDX warrants your SWEDX display(s) against defects in material and workmanship during the warranty period from SWEDX factory delivery date shown in the shipping documents. If a product proves to be defective in material or workmanship during the warranty period, SWEDX will, at its sole option repair or replace the product with a similar product, provided the purchaser adheres to certain return authorization procedures and guidelines. SWEDX reserves the right to charge customer in case of warranty conditions not are fulfilled.

### **Who the warranty protects:**

This warranty is valid only for the first purchaser.

### **What the warranty does not cover:**

1. Any product which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
  - A. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - B. Repair or attempted repair by anyone not authorized by SWEDX.
  - C. Any damage of the product due to shipment.
  - D. Removal or installation of the product.
  - E. Causes external to the product, such as electric power fluctuations or failure.
  - F. Use of supplies or parts not meeting SWEDX specifications.
  - G. Normal wear and tear.
  - H. Any other cause which does not relate to a product defect.
3. Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, anti-theft devices markings, gouges or any other defacement.
4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LCD Module.
5. No Defect Found (product returned to SWEDX as defective but failure is not duplicated by SWEDX's test method.)
6. The product is not in accordance with the fault in the application
7. Timber is a lifelike natural material which can cause some little changes in the precision of the produced product such as small openings line beside the connecting point and some other small changes which are out of SWEDX control and don't make any effect for the product functionality.

### **Dead on Arrival (DOA)**

If the product fails within the manufacturer's DOA period, a replacement product will be offered.

### **Before contacting us:**

In many cases, your TV may not need repair. Before you contact us, please consult the troubleshooting section in your user's manual or SWEDX's FAQ web pages at <http://www.swedx.com> to see if you can easily remedy the problem yourself.

**How to get service:**

For information on obtaining warranty service, contact SWEDX dealer (the place where you bought your product) in first choice. If for any reason you can not contact your dealer, please contact SWEDX Customer Service by visiting <http://www.swedx.com>.

**SWEDX technical support services:**

During the period of product warranty, we support your basic configuration, setup and troubleshooting questions, and when required, we provide you with all instructions on how to return your product for repair. For support inquiries, please visit <http://www.swedx.com>.

SWEDX reserves the right to make final decisions regarding problem determination and the appropriate service option. Exchange units assume the remaining warranty of the original product. Please refer to your SWEDX Limited Warranty Statement for complete terms and conditions, as some models have other terms and conditions. Some limitations and restrictions apply and these programs are subject to change without prior notice.

**Limitation of liability**

If your SWEDX product fails to work as warranted above, your sole and exclusive remedy shall be repaired or replaced. SWEDX's maximum liability under this limited warranty is expressly limited to the lesser of the price you have paid for the product or the cost of repairing or replacement of any hardware components that malfunction in conditions of normal use. SWEDX is not liable for any damages caused by the product or the failure of the product to perform, including any lost profits or savings or special, incidental, or consequential damages. SWEDX is not liable for any claim made by a third party or made by you for a third party.

This limitation of liability applies whether damages are sought, or a claim made, under this limited warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if you have advised SWEDX.

### **Accessories:**

SWEDX offers a wide range of accessories for LCD-TV. Visit <http://www.swedx.com> for more information.



#### **XSS-SP1**

TV-Stand made of solid Sapele wood



#### **XSS-BE1**

TV-Stand made of solid Beech wood





**XV1-46TV-SP1**



**[www.swedx.com](http://www.swedx.com)**

**SWEDX**